

Chain Catcher Installation Instruction

absoluteBLACK
established MMVIII

Fig.1


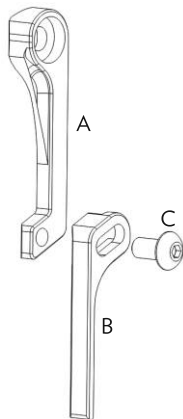


Fig.2

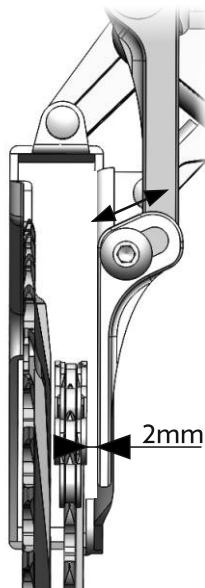

1. absoluteBLACK chain catcher is compatible with braze-on front derailleurs. Direct mount or with clamp adapter.
2. Assemble the adapter like on the Figure 1. Tighten the bolt (C) by hand only at this stage.
3. Shift the chain to the inner chainring up front and largest cog at the back. Then unscrew the bolt holding front derailleur to the frame.
4. Now re-install front derailleur with chain catcher positioned between the mounting bolt and frame adapter. At this point adjust front derailleur so it shifts properly. Cage should be only 1-2mm above the chainring teeth in tallest point of the oval. Derailleur bolt should be tightened to 5-7Nm.
5. With chain still on the inner chainring, move part (B) until the distance between chain and chain catcher is about 2mm (Fig. 2). Tighten the bolt gently (about 3Nm).

For more information visit www.absoluteblack.cc